








## **Command Description**

The Insert Excel Table command enables the user to create a table from an excel spreadsheet in csv format and customise the settings for display in the plan view.

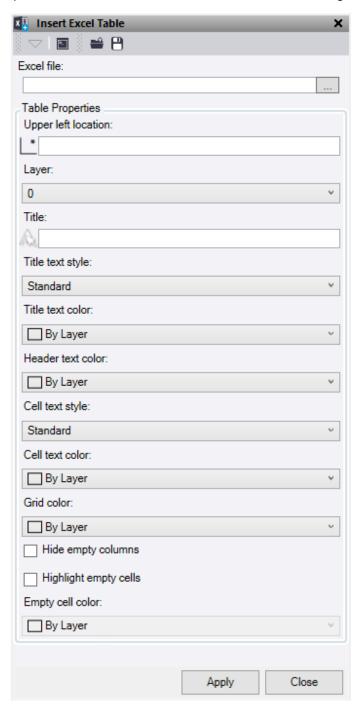

At the top of the command pane there is the ability to **load** and **save** a settings file. Once you have populated the command with the appropriate settings you can save it in a file that can be reloaded in the future.







## **Table Properties:**

- 1. Select the browse icon to choose an **Excel file**.
- 2. In the file explorer open navigate to the **folder containing the excel table** in **.csv** format. Select the file to **open**.
- 3. Click in the **Upper Left Location** selection field and select a location in the graphic view or type a coordinate to choose where the upper left-hand corner of the table is inserted. This point will be at the bottom left corner of the Title row.
- 4. Choose a layer or create a new one to select where the table is stored.
- 5. If required give the table a Title.
- 6. Select a **Title Text Style** or create a new text style.
- 7. Choose a Title Text Colour.
- 8. Select a **Header Text Colour** to choose the colour of the column headers which is the first row of data in the spreadsheet.
- 9. Choose a **Cell Text Style** or create a new text style.
- 10. Select a Cell Text Colour.
- 11. Give the **Grid Lines** a colour.
- 12. Tick the **Hide empty columns** box if you do not want columns with no values displayed.
- 13. Tick the **Highlight empty cells** box and select a cell colour if you wish to highlight the empty cells within the table.
- 14. Click **Apply** to insert the table and turn on the appropriate layer to view.

## Example:

Surface Report						
	Slope Ranges		Areas			
Boundary Name	Min Slope (%)	Max Slope (%)	Planar	Surface	Chainage	Offset
Road Edge			511	511.4	448.503	0.851
	0	1	0	0		
	1	2	0	0		
	2	5	511	511.4		
	5	20	0	0		
	20	50.06574205	0	0		
Road Edge			537.3	537.9	287.975	-0.101
	0	1	2	2		
	1	2	39.7	39.7		
	2	5	257.7	257.9		
	5	20	237.8	238.3		
	20	6.871241501	0	0		
Batter Edge			960.9	1076	392.416	-5.418
	0	1	0	0		
	1	2	0	0		
	2	5	0	0		
	5	20	0	0		
	20	62.26367995	960.9	1076		
Road Edge			630.5	631.6	367.251	0.137
	0	1	0	0		
	1	2	0	0		
	2	5	96.5	96.6		
	5	20	534	535		
	20	6.711697786	0	0		