




Set Point Description

Command Description

The Set Point Description command allows the user to set the description fields of points using their own extended feature property values.

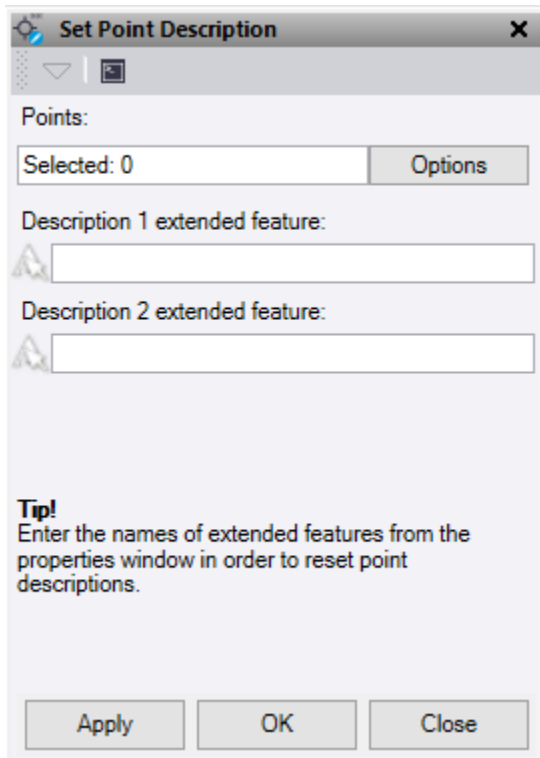

1. Click in the **Points** field and then in a graphic view select the data you want to convert. Click **Options** for additional selection options.
2. Enter the name of the extended feature from the properties window of the point that are to be used in each description field.
3. Do either of the following:
 - Click **Apply** to apply the changes and keep the **Set point Description** command pane open.
 - Click **OK** to apply the changes and close the **Set point Description** command pane.

Note: This command only works on points data with extended features present. These features are generally added to points that have been created in Trimble Access from IFC models.